



Backrest Instructions


Tools Needed

- Denatured Alcohol
- Clean Cloth/Rag

Attach your Micatech Top Case onto your bike. Clean the Top Case surface using denatured alcohol and a clean cloth/rag.

Have the passenger sit on the bike (if possible, have a third person assist so the rider can sit on the bike as well). Without removing the protective backing tape, place the Upper and Lower Backrests into position. When the passenger is most comfortable, mark the location of the Backrests.

Now, have the passenger (and rider) get off the bike. Hold the Backrests in the marked locations. Fully open the Top Case and make sure there is no interference between the upper and lower Backrests. See photo below:

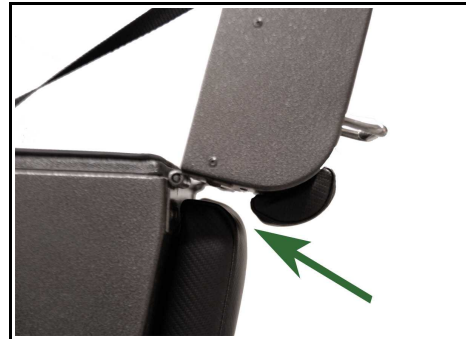

Next, peel off the protective backing tape and carefully place the Backrests into location. *NOTE: Be sure you are satisfied with the location because it is nearly impossible to relocate the 3M Dual Lock afterwards!* (Don't worry, you'll still be able to fine tune your comfort with minor adjustments). Once you've confirmed the position, push the Backrests firmly onto the Top Case.

Allow the adhesive to set for at least 24 hours before removing the Backrests. If needed, you can now remove the Backrests or make minor position adjustments. When removing the Backrests, pull from top down and away from the Top Case. When reattaching the Backrests, gently align them into place, then firmly press them onto the Top Case one side at a time. Make sure the fasteners are completely engaged before riding.

Enjoy your ride!