



Kawasaki KLR 650A Instructions for Mounting KLR Pack Rack and Micatech Top Case

Thank you for purchasing the Micatech KLR Pack Rack and Top Case. Please read through the installation instructions before you begin and call us if you have any questions at 1-888-464-6494.

Tools Needed: 4 mm Allen wrench


Pack Rack Hardware:

- 4 – M6 x 45 flat head socket cap screws
- 2 – M6 x 70 flat head socket cap screws

- 4 – Aluminum spacers 1" long
- 2 – Aluminum spacers 1.125" long

Overview

The Micatech Pack Rack is installed on top of the KLR rack, using the aluminum spacers provided.

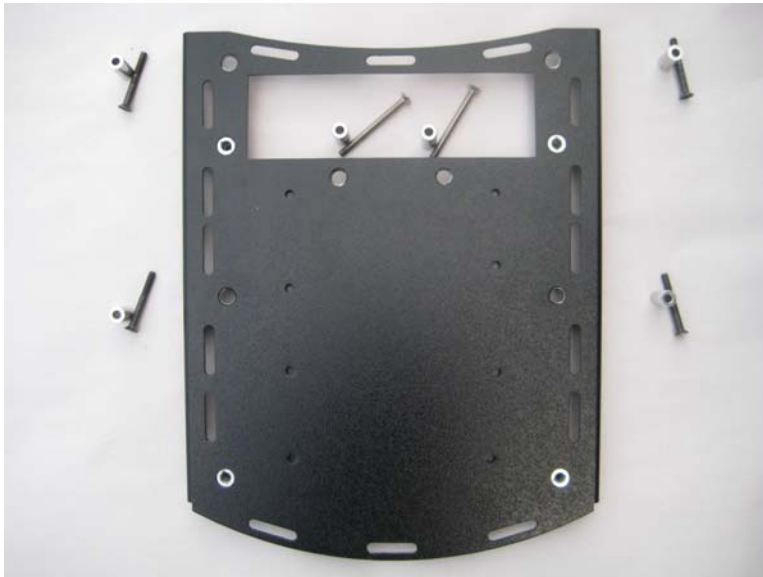



Remove six screws from the KLR rack and replace with the Micatech aluminum spacers, as shown below. The four 1" spacers are inserted at the four corners and the two 1.125" spacers are inserted in the center two positions. The remaining two KLR screws on the sides are left in place.



Using the six supplied flat head socket cap screws, tighten the Micatech pack rack onto the KLR rack.





Mount the Top Case

Mounting and removing the Micatech Top Case is very simple and requires no tools.

Locate the top case so the four holes in the bottom of the top case line up with the four female 1/4- turns on the Pack Rack.

Insert male 1/4-turns, pressing down, twist and lock. Note: When new, the 1/4- turn fasteners may be hard to engage. If they are difficult to engage, try removing the thin rubber washer on the 1/4-turns. If necessary, use a large flathead screwdriver, push down and twist clockwise to lock the 1/4-turn fasteners.



Load up your gear and go!



